
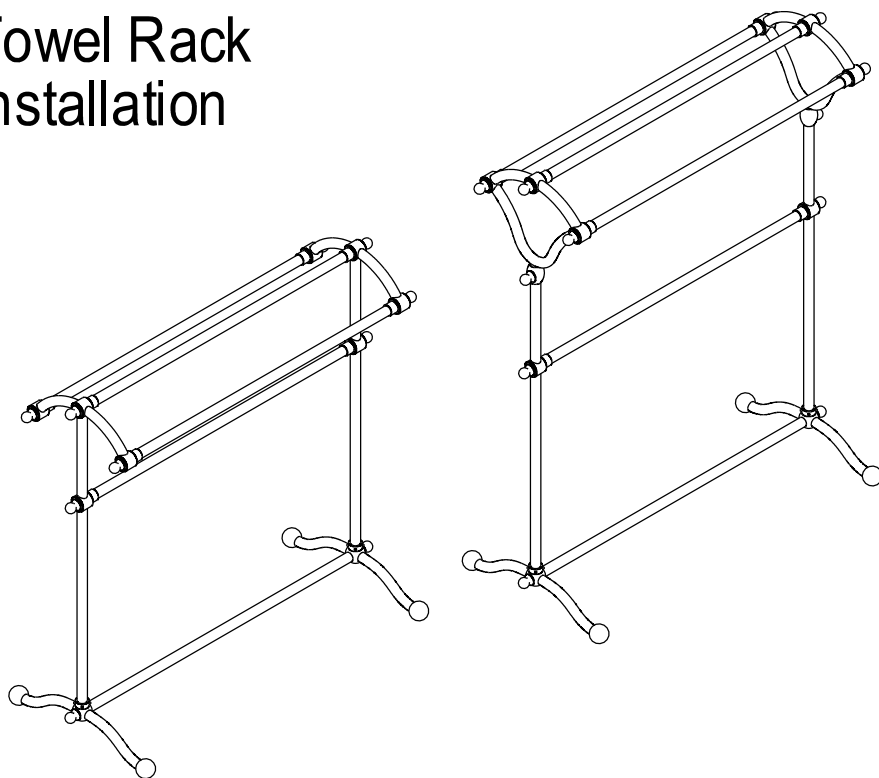





Towel Rack Installation




Parts:


CC2281 Screw		CC2291 Screw	
			
2 Pcs	4 Pcs	4 Pcs	2 Pcs

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA91710


Installation Steps:

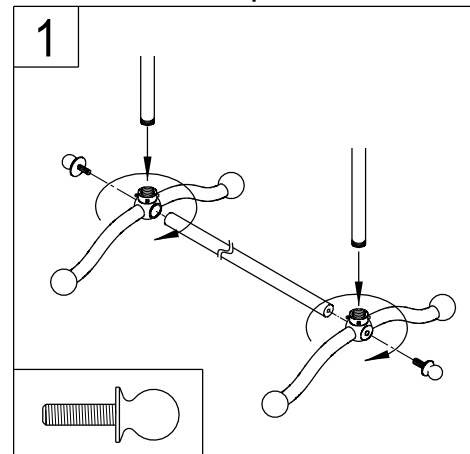


1. Screw in 29" vertical side bars into foot and bolt in bottom bar between assembly.

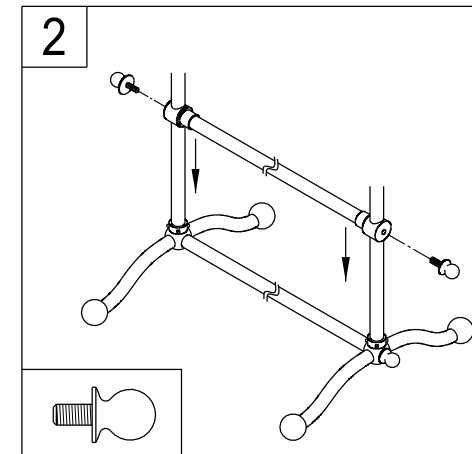

2. Slide middle bar down vertical side bars and tighten bolts at desired level.

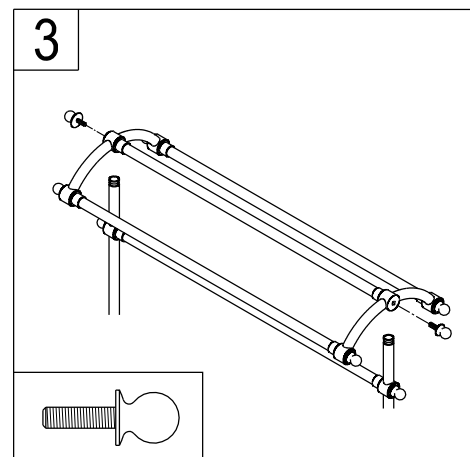

3. Bolt in top rack assembly to bottom assembly.

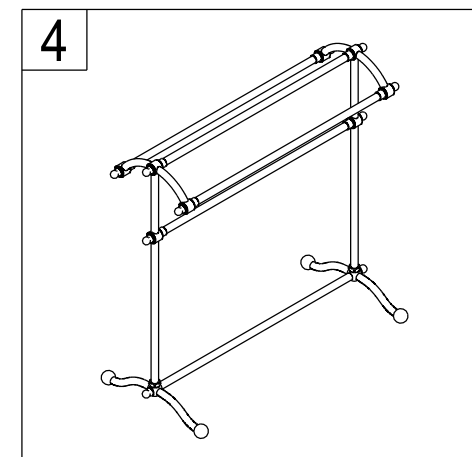

4. Check all bolts are tight and secure on your completed towel rack.