


# DETERMINING BACKSET

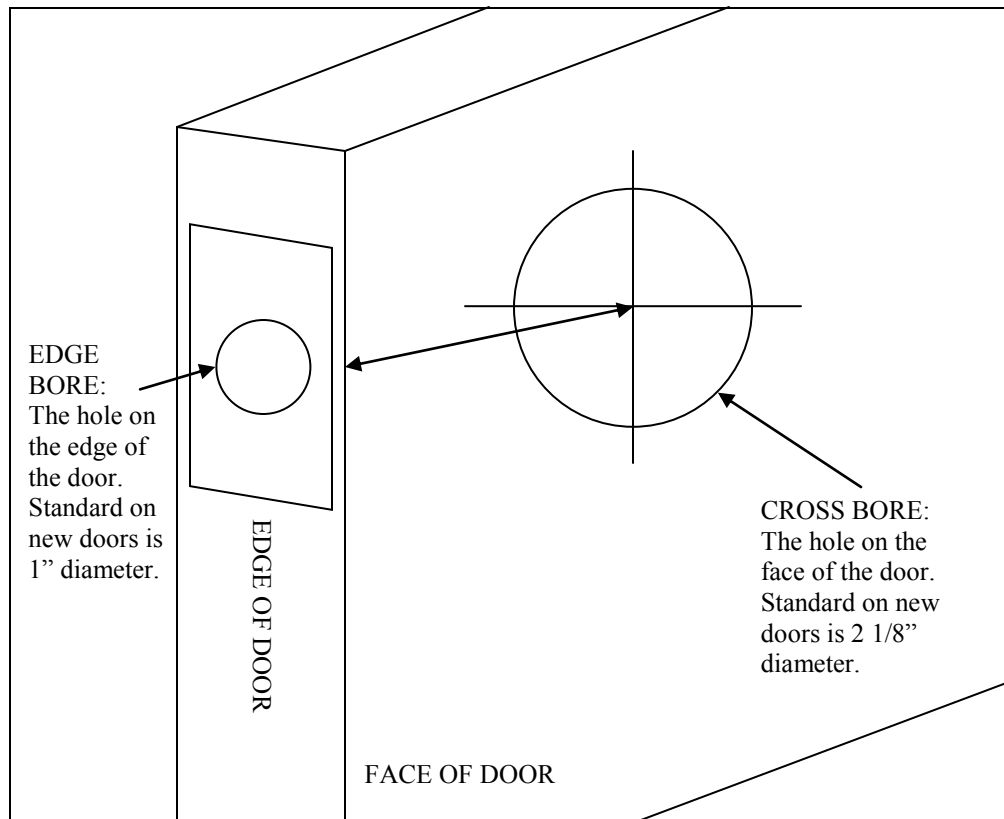

- Backset is determined by measuring from the edge of the door to the center of the hole the spindle will pass through (*the cross bore*).
- Standard backset on most doors in the US is 2 3/8".
- The second most common backset is 2 3/4".