





INTERIOR DOOR HARDWARE PROGRAM

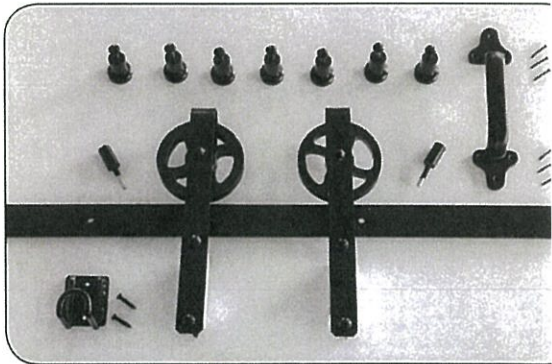

- IDHP - 2000 Kit includes:**
2 Strap Trolleys
1 8' Track (7 Spacers & 2 Door Stops)
1 Handle
1 Door Glide

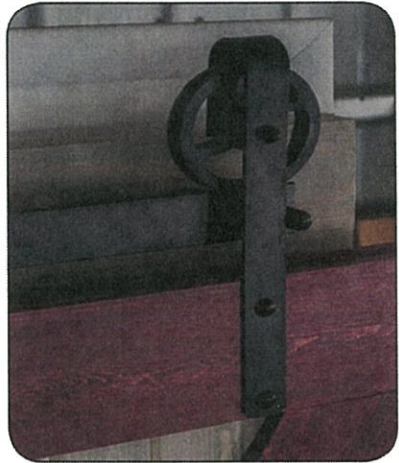

Interior Track & Trolley Installation Guide

Step 1. Mount Track to Wall

- The track has pre drilled holes at 16" centers to match typical wall studs.
 1. Locate your studs and mount track to wall using the 7 track spacers provided.

Note: If your opening has trim installed around it, you will require a 2" x 6" x 9' wood header. This will move the track away from the wall to avoid contact with the trim. If not, please proceed with number 1 above.




Step 2. Mount Stops to end of track.

- There are two stops provided with carriage bolts, stops and nuts.
 1. Install stop in last holes at each end of the track. Make sure that the carriage bolt is facing out and stop is located on the face of the track.



Step 3. Mount Trolley to Door

- There are two trolley assemblies provided with hardware.

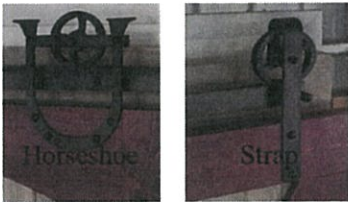

1. Trolley's should be mounted at the top end of the doors, approximately 6" from the edge of the door.
2. Use the drill pattern provided to ensure that the holes drilled are properly spaced. The critical element is to line up the "Top of Door Line" on the template before you drill.
3. Use a 3/8" drill bit to drill holes.
4. Fasten Trolley to door with carriage bolts provided. Again, make sure the carriage bolts are facing out. Tighten nuts on back of the door.

Step 4. Mount Handle on Door

- There is one handle provided with each kit.
 1. Decide which way the door will open and install the door handle on the side of the door that you will pull to open and close.



Step 5. Remove Anti Slip Pins from Trolley

- The anti slip pin is located on the back of the trolley. This will be fastened back, once the door is hung.

Step 6. Lift Door Assembly on Track.

- Depending on your door configuration, you may need assistance to lift the door and trolley onto the track.
 1. Lift Door and place trolley onto track. There is a groove in the wheel that allows the trolley to ride on the track.



Step 7. Re Install the Anti Slip Pins






1. Re fasten the Anti Slip Pins onto the back side of the trolley. There is a welded nut provided to screw the pin into.

Step 8. Install Door Guide to Wall

- There is one door guide provided with each kit. This guide keeps the bottom of the door to swing out, away from the wall, as well as provides support for the door to slide open and close.
 1. Mount Door Guide on the wall 1/4" below the bottom of the hanging door. Locate the guide on the side of the opening in which the door is slid open to. This will allow the guide to work as the door is open and closed.



DOOR HARDWARE SPECIFICATIONS

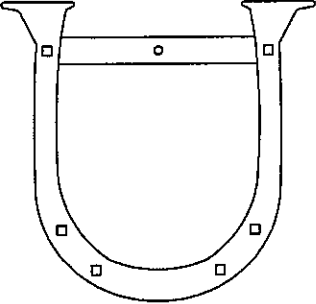PART NO.	LENGTH	WIDTH/HEIGHT	MAT'L
 <p data-bbox="191 611 505 674">IDHP-1001 HORSESHOE HANGER</p>	11 7/16"	11 1/4"	1/4" H.R. PLATE
 <p data-bbox="183 1136 521 1199">IDHP-2001 SINGLE DROP HANGER</p>	14 1/8"	1 1/2"	1/4" H.R. PLATE
 <p data-bbox="269 1423 431 1476">IDHP-3000 WHEEL</p>	5 1/8" DIA.	-	3/4" H.R. PLATE
 <p data-bbox="277 1629 431 1682">IDHP-3001 TRACK</p>	8'-0"	2"	1/4" H.R. BAR
 <p data-bbox="180 1850 542 1913">HS-GS-100119 STAY ROLLER BRACKET</p>	5 1/8"	3"	10 GA. GALV.
<p data-bbox="180 1923 505 1986">HS-GS-100120 BOTTOM DOOR GUIDE</p>	3 5/8"	3"	10 GA. GALV.

NO.	NUMBER	DESCRIPTION	QTY.
1	IDHP-2000	DOOR HANGER	2
2	-	WASHER	4
3	-	3/8 NUT AND BOLT	4
4	-	3/8 x 2 3/4' LONG CARRIAGE BOLTS	4
5	IDHP-3001	TRACK	1
6	IDHP-3003	TRACK SPACER	7
7	IDHP-3004	TRACK STOP --	2
8	-	DOOR	1
9	-	HANDLE	1
10	-	SCREWS FOR HANDLE	6
11	-	DOOR GUIDE	1
12	-	SCREWS FOR DOOR GUIDE	2
13	-	LAG BOLTS	7
14	-	ANTI-DERAILING BOLTS	2
15	-	2' X 6' HEADER NOT PROVIDED	1

